




# iHip Fold-Up Portable Speaker Stand Replacement

If the stand used to hold up the speakers is jammed or broken, you can use this guide to replace it.

Written By: Lisa

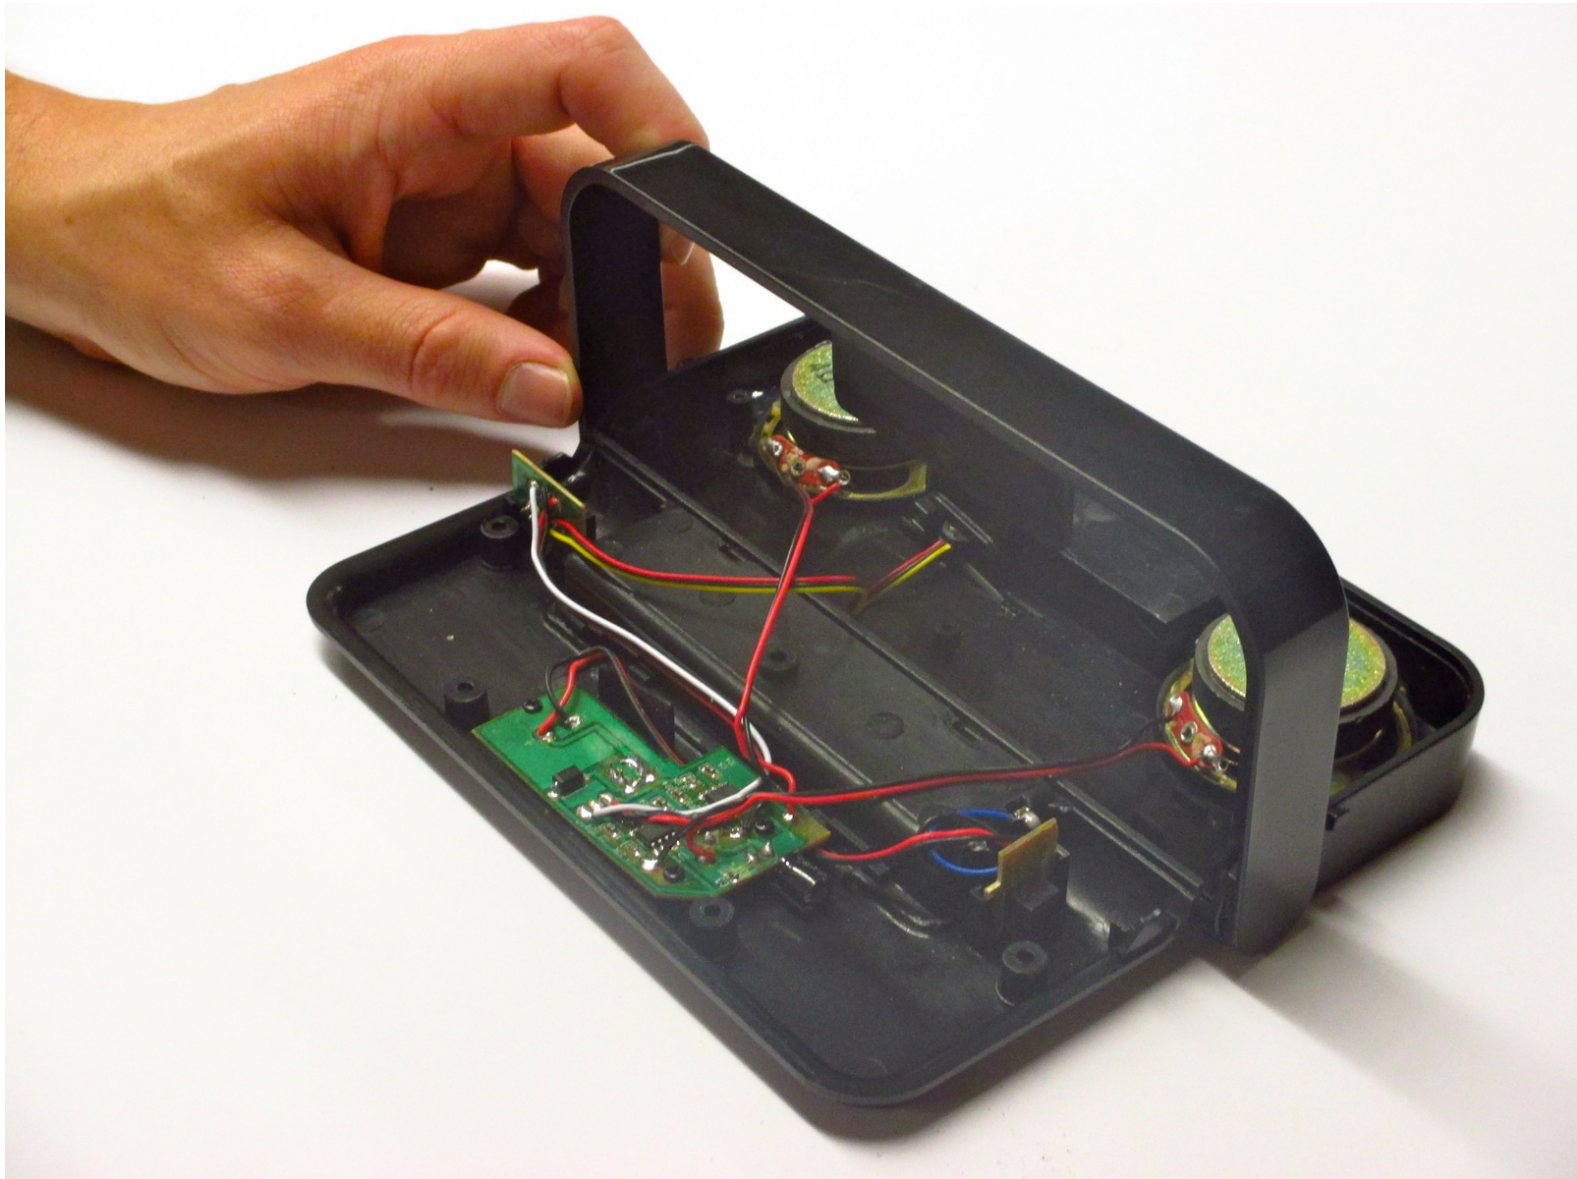



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Fingers](#) (1)
- [Small Needle Nose Pliers](#) (1)



## PARTS:


- [iHip portable speaker stand](#) (1)

## Step 1 — Removing the battery case cover



- 1. Place the device on a flat surface as shown.
- ⓘ The battery case cover is found at the bottom of the device.
- 2. To remove the battery case cover, push down gently and slide the cover in the direction that the arrows indicate.

## Step 2 — Cleaning the battery case

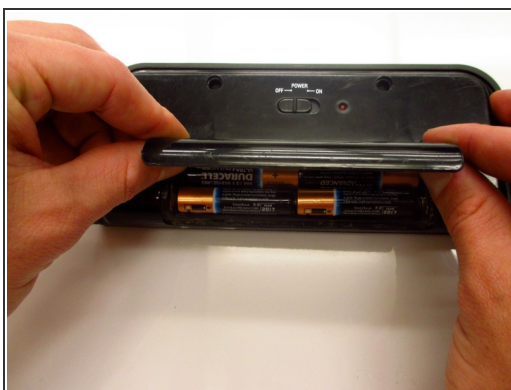

- 1. Remove and discard the old batteries.
- 2. Use the detailing brush and a paper towel to remove any corrosion left by previous batteries.

## Step 3 — Inserting new AAA batteries




- Insert batteries with the "-", or dull side, facing the springs.

**i** If you are replacing the stand, you'll insert the batteries last.




## Step 4 — Removing the screws

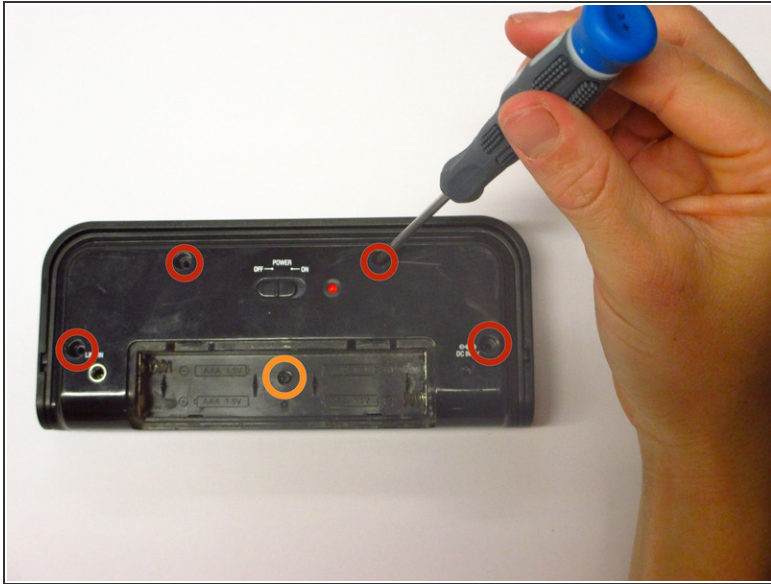


- Unscrew the four outer 1.0 mm screws with a Phillips-Head screwdriver.
  - ❗ Screws will be magnetized in position and will require the use of tweezers to be removed.
- Push down gently on the battery case cover and slide it in the direction the arrows indicate. Remove the batteries.
- Unscrew the 0.6 mm screw located in the center of the battery case.
- Keep 10 mm and 0.6 mm screws separate from each other for reassembly.

## Step 5 — Removing the back cover

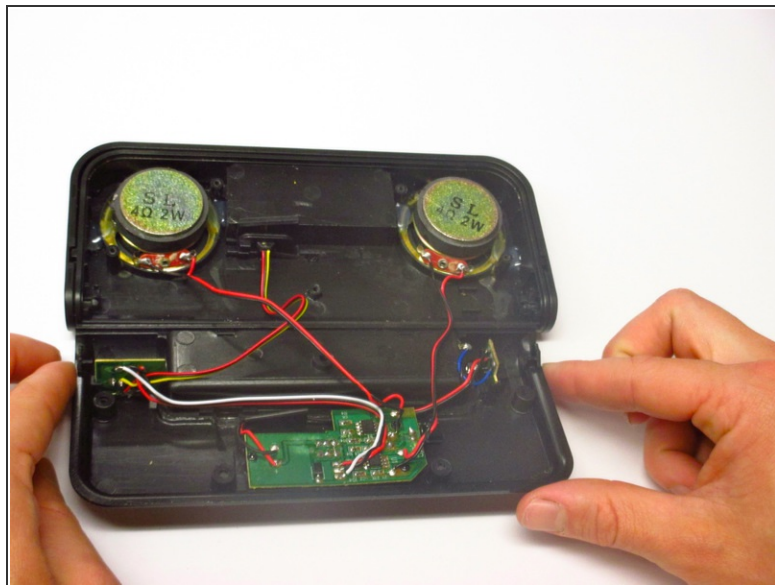

- Remove the back cover carefully; there are many wires that connect it to the device.



## Step 6 — Positioning the Stand

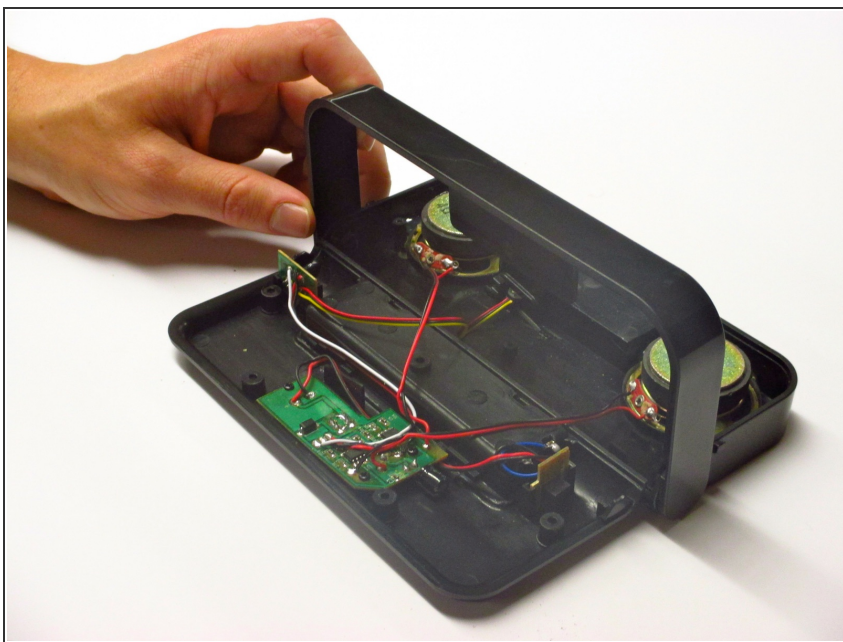

- Pull the stand backwards and around the system.
- ⓘ Make sure the stand is positioned perpendicular to the speaker system.




## Step 7 — Removing the Stand

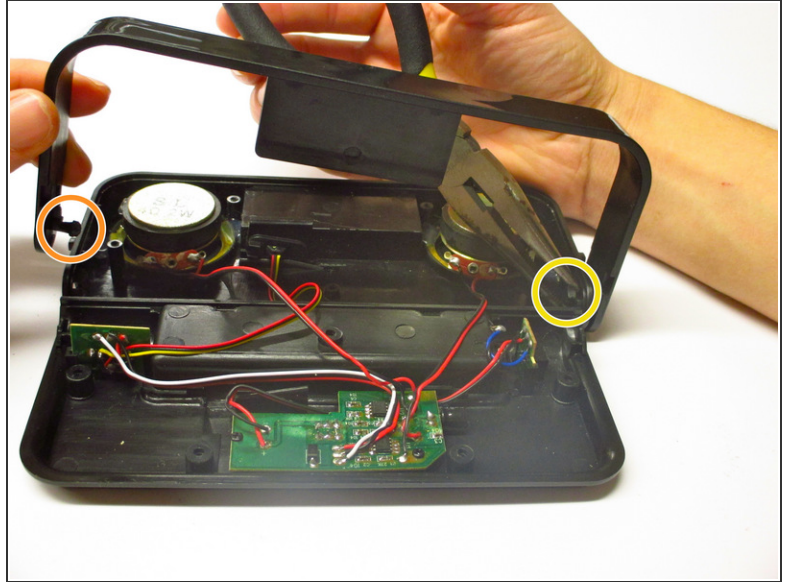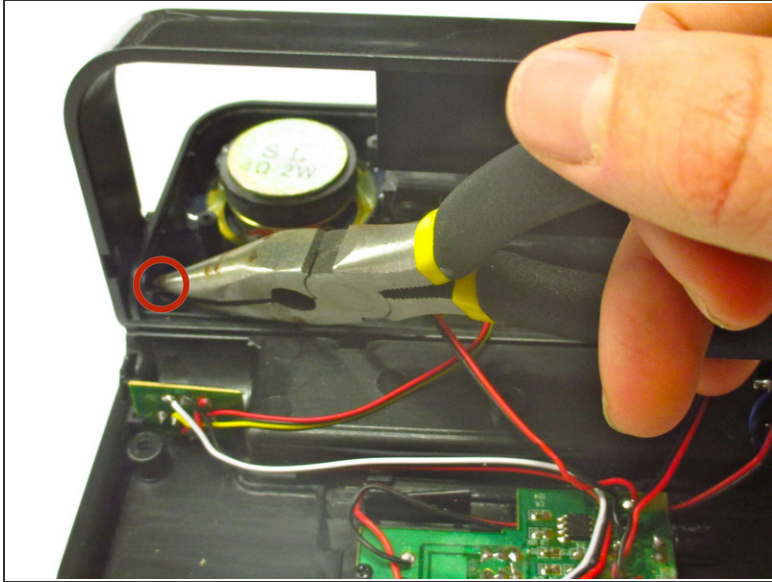

- Locate the two small connection points for the stand.
- Using small needle nose pliers, pinch the end of the stand toward the side of the speaker case.
- Pop the end of the stand out of the hole in the side of the speaker case.
- Repeat this step for the opposite side of the stand.

## Step 8 — Connecting The New Stand

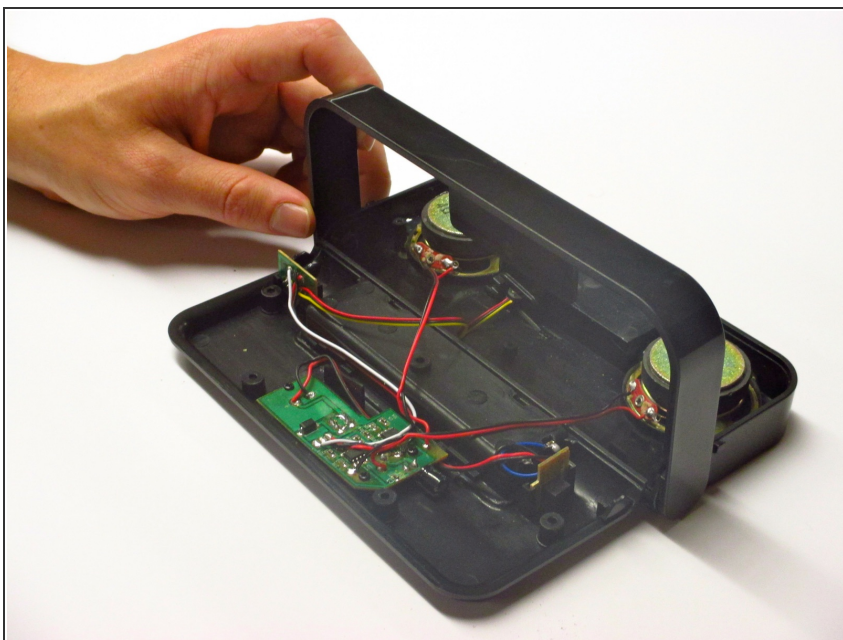

- 1. Position the new stand perpendicular to the speaker case.
- 2. Align the bulbs at the end of the stand with the holes in the side of the speaker case.
- 3. Gently push the bulbs into the holes of the speaker case.
- 4. Pull the stand back around the speaker system.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 12:25:20 AM.